

Potable water valve, 2-way, Press fit

- For potable water applications
- NSF/ANSI 372 Lead Free
- NSF/ANSI 61 CLD 23 Water Quality







| Tec | hni | ical | d | ata |
|-----|-----|------|---|-----|
| | | | _ | |

| E | acti | ۸r | ısı | ы | ata |
|-----|------|-----|-----|---|-----|
| rui | ICLI | OI. | ы | u | ala |

| Valve size [mm] | 0.5" [15] |
|-----------------------------|---|
| Potable water certificate | NSF/ANSI 61 |
| | NSF/ANSI 372 |
| Fluid | Potable water |
| Fluid temperature | -4212°F [-20100°C] |
| Body Pressure Rating | 250 psi CWP |
| Close-off pressure Δps | 200 psi |
| Differential pressure Δpmax | 30psi |
| Leakage rate | 0% |
| Angle of rotation | 90° |
| Pipe connection | Press fit |
| Installation orientation | upright to horizontal (in relation to the stem) |
| Servicing | maintenance-free |
| Flow Pattern | 2-way |
| Cv | 29 |
| Valve body | Lead free and dezincification resistant bronze (CW511L) |
| Stem | Lead free and dezincification resistant bronze (CW511L) |
| Seat | PTFE |
| O-ring | EPDM |
| | |

Suitable actuators

Materials

| Ball | Chrome plated lead free brass | | |
|----------------------|-------------------------------|--|--|
| Non Fail-Safe | CQB(X) | | |
| Electrical fail-safe | CQKB(X) | | |

Safety notes



- The ball valve has to be exercised at least once a week, so that the quality of potable water as well as the functionality are not affected.
- The valve has been designed for use in stationary potable water systems and must not be
 used outside the specified field of application, especially in aircraft or in any other airborne
 means of transport.
- The valve does not contain any parts that can be replaced or repaired by the user.

Product features

Operating mode

The on/off ball valve is adjusted by a rotary actuator. The rotary actuator is connected by an on/off signal. Open the ball valve counterclockwise and close it clockwise.




Installation notes

Notes

The ball valve is a regulating device. To fulfil this control task in the long term, the circuit must be kept free from particle debris (e.g. welding beads during installation work).

Permissible installation orientation

The ball valve can be installed upright to horizontal. The ball valve may not be installed in a hanging position, i.e. with the stem pointing downwards.

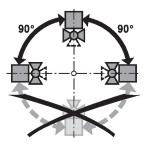

Servicing


Ball valves and rotary actuators are maintenance-free.

Before any service work on the control element is carried out, it is essential to isolate the rotary actuator from the power supply (by unplugging the electrical cable if necessary). Any pumps in the part of the piping system concerned must also be switched off and the appropriate slide valves closed (allow all components to cool down first if necessary and always reduce the system pressure to ambient pressure level).

The system must not be returned to service until the ball valve and the rotary actuator have been correctly reassembled in accordance with the instructions and the pipeline has been refilled by professionally trained personnel.


Flow direction

Please also ensure that the ball is in the correct position (marking on the shaft).

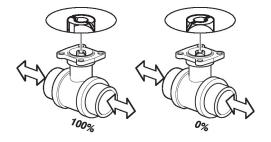


Dimensions

| DN | Weight |
|----|-------------------|
| 15 | 0.53 lb [0.24 kg] |

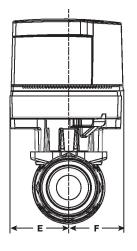



CQ

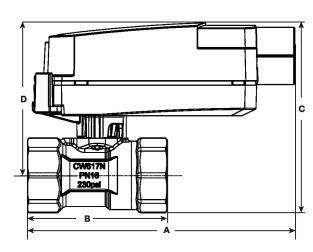



Dimensions

 

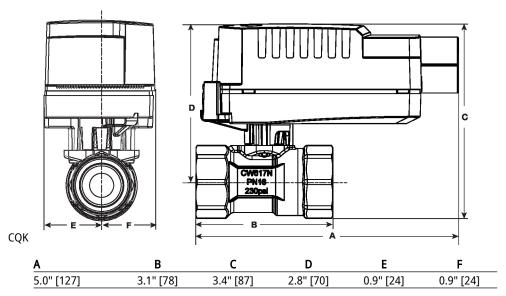



On/Off, Floating point, Non fail-safe, 100...240 V

- Nominal voltage AC 100...240 V
- Control On/Off, Floating point







| Technical data | | |
|-----------------|------------------------------------|---|
| Electrical data | Nominal voltage | AC 100240 V |
| | Nominal voltage frequency | 50/60 Hz |
| | Nominal voltage range | AC 85265 V |
| | Power consumption in operation | 1 W |
| | Power consumption in rest position | 0.7 W |
| | Transformer sizing | 2 VA |
| | Electrical Connection | 18 GA appliance cable, 3 ft [1 m], with 1/2" NPT conduit connector |
| | Overload Protection | electronic thoughout 090° rotation |
| | Electrical Protection | actuators are double insulated |
| Functional data | Angle of rotation | 90° |
| | Angle of rotation note | adjustable with mechanical stop |
| | Running Time (Motor) | 75 s / 90° |
| | Noise level, motor | 35 dB(A) |
| | Position indication | pointer |
| Safety data | Power source UL | Class 2 Supply |
| | Degree of protection IEC/EN | IP40 |
| | Degree of protection NEMA/UL | NEMA 2 |
| | Enclosure | UL Enclosure Type 2 |
| | Agency Listing | cULus acc. to UL60730-1A/-2-14, CAN/CSA E60730-1:02 |
| | | CE acc. to 2014/30/EU and 2014/35/EU |
| | Quality Standard | ISO 9001 |
| | UL 2043 Compliant | Suitable for use in air plenums per Section 300.22(C) of the NEC and Section 602 of the IMC |
| | Ambient humidity | Max. 95% RH, non-condensing |
| | Ambient temperature | 35104°F [240°C] |
| | Storage temperature | -40176°F [-4080°C] |
| | Servicing | maintenance-free |
| Weight | Weight | 0.48 lb [0.22 kg] |

UL94-5VA

Materials

Housing material



Product features

Application

Non-Fail Safe On/Off/Floating Point ZoneTight actuator.

Valve selection should be done in accordance with the flow parameters and system specifications.

The actuator is mounted directly to the valve without the need for tools or additional linkage.

The actuator operates in response to AC 100...240 V. Angle of rotation is adjustable with the integrated mechanical stop.

Electrical installation

INSTALLATION NOTES

Actuators with appliance cables are numbered.

Actuators may be connected in parallel. Power consumption and input impedance must be observed.

Actuators with plenum cable do not have numbers; use color codes instead.

Meets cULus requirements without the need of an electrical ground connection.

Apply only AC line voltage or only UL-Class 2 voltage to the terminals of auxiliary switches. Mixed or combined operation of line voltage/safety extra low voltage is not allowed.




Warning! Live electrical components!

During installation, testing, servicing and troubleshooting of this product, it may be necessary to work with live electrical components. Have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks. Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

Wiring diagrams

On/Off AC 110...230 V

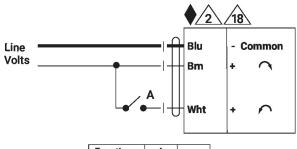

| Functions | Α | |
|-----------|----|---------------|
| 100% | 1 | 7 |
| 0% | /- | $\overline{}$ |

