

VAV-Universal, modular control solution with integrated  $\Delta p$  sensor for polluted media. Can be combined with damper actuator optimally suited to the room pressure application. Field of application: technical building equipment, HVAC systems

- Application: Room pressure control in comfort and sensitive areas
- Functional Range Differential Pressure -0.3...0.3 inch WC [-75...75 Pa]
- suitable for ...-VST actuator
- Control modulating, communicative, Hybrid
- Communication via BACnet MS/TP, Modbus RTU, Belimo MP-Bus or analog control


**Technical data**

<b>Electrical data</b>	Nominal voltage	AC/DC 24 V
	Nominal voltage frequency	50/60 Hz
	Nominal voltage range	AC 19.2...28.8 V / DC 21.6...28.8 V
	Power consumption in operation	1.5 W
	Transformer sizing	2 VA plus connected VST actuator
	Transformer sizing note	Imax 20 A @ 5 ms, incl. actuator
	Connection supply / control	terminals 2.5 mm <sup>2</sup> [30...14 GA]
	Sensor input S1	Connection of external sensor (passive / active / switch)
	Actuator Connection (I) (M)	AC/DC 24 V, PP-Link for VST actuator
<b>Data bus communication</b>	Communicative control	BACnet MS/TP Modbus RTU MP-Bus
	Number of nodes	BACnet / Modbus see interface description MP-Bus max. 8
<b>Functional data</b>	Operating range Y	2...10 V
	Input Impedance	100 k $\Omega$
	Operating range Y variable	0.5...10 V
	Position feedback U note	Max. 0.5 mA Options: $\Delta p$ / Position
	Position feedback U variable	0...10 V Start point 0...8 V End point 2...10 V
	Override control	z1 motor stop / damper OPEN (AC/DC 24 V) z2 damper CLOSE / MAX (AC/DC 24 V)
	Configuration	via Belimo Assistant App / PC-Tool
<b>Measuring data</b>	Measuring principle	Belimo M1R, diaphragm sensor
	Installation position	position-independent, no zeroing necessary
	Functional Range Differential Pressure	-0.3...0.3 inch WC [-75...75 Pa]
	Accuracy Differential Pressure	$\pm 0.001$ inch WC [ $\pm 0.25$ Pa]
	Burst pressure	$\pm 28$ inch WC [ $\pm 7$ kPa]
	Condition Measuring Air	32...122°F [0...50°C] / 5...95% RH, non-condensing
	Pressure tube connection	Nipple diameter 0.2" [5.3 mm] for pressure tube (3/16" [5 mm] inner diameter)
<b>Safety data</b>	Protection class IEC/EN	III, Safety Extra-Low Voltage (SELV)
	Protection class UL	III, Safety Extra-Low Voltage (SELV)
	Power source UL	Class 2 Supply

<b>Safety data</b>	Degree of protection IEC/EN	IP42
	Degree of protection NEMA/UL	NEMA 1
	Enclosure	UL Enclosure Type 1
	EU Conformity	CE Marking
	Certification IEC/EN	IEC/EN 60730-1
	UL Approval	cULus according to UL60730-1, CAN/CSA E60730-1
	UL 2043 Compliant	Suitable for use in air plenums per Section 300.22(C) of the NEC and Section 602 of the IMC
	Mode of operation	Type 1
	Rated impulse voltage supply / control	0.8 kV
	Pollution degree	2
	Ambient humidity	Max. 95% RH, non-condensing
	Ambient temperature	32...122°F [0...50°C]
	Storage temperature	-40...176°F [-40...80°C]
	Servicing	maintenance-free
<b>Weight</b>	Weight	0.66 lb [0.30 kg]

**Safety notes**


- The device must not be used outside the specified field of application, especially not in aircraft or in any other airborne means of transport.
- Only authorized specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The device may only be opened by lifting the cover. It does not contain any parts that can be replaced or repaired by the user.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

**Product features**

**Application** The VAV universal controller VRU-M1R-BAC is used in the comfort area as well as in sensitive working areas with contaminated media for room pressure applications.

**Pressure measurement**

The integrated M1R differential pressure sensor is suitable for detecting very small pressure differences. The maintenance-free sensor technology enables a wide range of applications in the HVAC comfort area: office, hotel, etc. and in sensitive work areas: hospital rooms, clean rooms, etc.

**Actuators**

For the various applications and damper designs, the damper manufacturer has various actuator variants with running times of 2.5...120 s available.

**Control function**

Room pressure control (RP) and room pressure cascade control (RPC), description see application library

**Application room pressure control (RP)**

Room pressure control (RP) for rooms with switchable or variable  $\Delta p$  value  $P'_{min} \dots P'_{max}$  via a continuous command variable (analogue or bus).

Application A) - with non-critical room leakage rate

Rooms with non-critical leakage rates / overflows, room pressure controller acting on supply or extract air dampers.

Application B) - with low room leakage rate

Rooms with low leakage rates / overflows, room pressure controller acting on bypass damper mounted parallel to the VAV unit.

Description see application library

$P'_{nom}$

OEM specific calibration parameters: 0.02...0.3 inch WC [5...75 Pa]

$P'_{max}$

Maximum operating pressure, adjustable 20...100% of  $P'_{nom}$

$P'_{min}$

Minimum operating pressure, adjustable 0...100% of  $P'_{nom}$

Room pressure mode

Switchable: negative / positive pressure via Belimo Assistant App or BACnet/Modbus

**Application room pressure cascade control (RPC)**

Room pressure cascade control (RPC) for rooms with low leakage rates / overflows acting on volume flow controller, with switchable or variable  $\Delta p$  value  $P'_{min} \dots P'_{max}$  via a continuous command variable (analogue or bus).

$P'_{nom}$

OEM specific calibration parameters: 0.02...0.3 inch WC [5...75 Pa]

$P'_{max}$

Maximum operating pressure, adjustable 20...100% of  $P'_{nom}$

$P'_{min}$

Minimum operating pressure, adjustable 0...100% of  $P'_{nom}$

Room pressure mode

Switchable: negative / positive pressure via Belimo Assistant App or BACnet/Modbus

**Demand Control Ventilation (DCV)**

Output of the demand signal (damper position) to the higher-level automation system - DCV function (Fan Optimizer).

**Bus operation**

Thanks to the multi-bus functionality of the VRU-...-BAC, the VAV universal controllers can be easily integrated into a bus system. The communication interface is defined on the system using the Belimo Assistant App: BACnet MS/TP, Modbus RTU, Belimo MP-Bus.

A hybrid mode is optionally available for BACnet MS/TP and Modbus RTU, bus connection combined with analog control.

In bus mode, a sensor (0...10 V / passive) can optionally be connected, e.g. a temperature sensor or a switching contact, for integration into the higher-level bus system.


**MP-Bus application Compatibility mode: Standard / VRP-M**

The VRU-...-BAC is based on the new Belimo MP data pool model.

If the VRU-...-BAC is used as a VRP-M replacement in an existing MP-Bus system, the VRU-...-BAC can be set to the VRP-M function with the compatibility mode parameter. See instructions: VAV-Universal - MP-Bus Existing system: Replace VRP-M with VRU-...-BAC.

Operating settings see application library

Operating settings Min / Max / Nominal

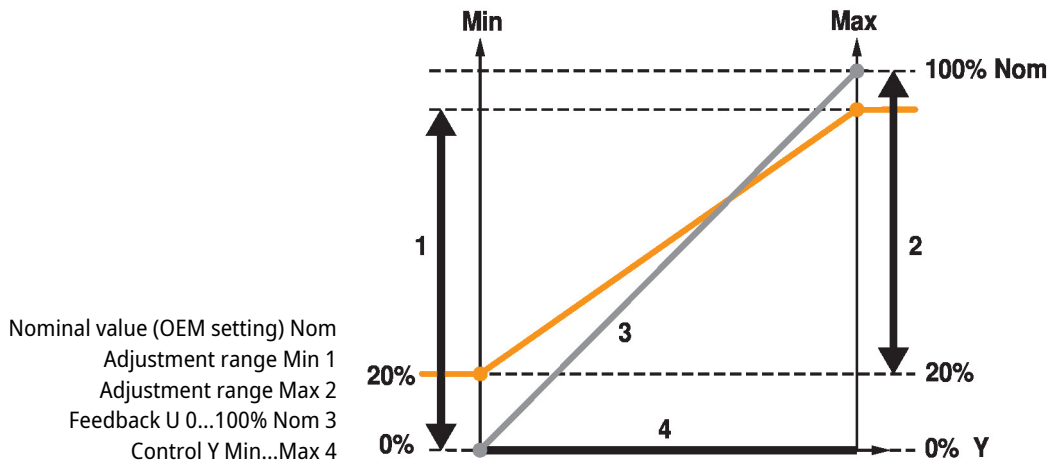

Nominal value (OEM setting) Nom  
 Adjustment range Min 1  
 Adjustment range Max 2  
 Feedback U 0...100% Nom 3  
 Control Y Min...Max 4

**Operating and service tools** Smartphone with Belimo Assistant App - contactless operation via the integrated NFC interface.  
 PC-Tool (ZTH EU) - can be locally plugged into the service socket or remotely via MP connection.

Accessories

Electrical accessories	Description	Type
	Dummy plug for VST connector plug, Multipack 25 pcs.	ZG-VRU01
Tools	Description	Type
	Service Tool, with ZIP-USB function, for programmable and communicative Belimo actuators, VAV controller and HVAC performance devices	ZTH EU
	Belimo PC-Tool, Software for adjustments and diagnostics	MFT-P
	Belimo Assistant App, Smartphone app for easy commissioning, parametrising and maintenance	Belimo Assistant App
	Converter Bluetooth / NFC	ZIP-BT-NFC
	Complete functions ZIP-BT-NFC as of production date 2019-10-15	

Electrical installation




**Supply from isolating transformer.**

The wiring of the line for BACnet MS/TP / Modbus RTU is to be carried out in accordance with applicable RS485 regulations.


**Modbus / BACnet:** Supply and communication are not galvanically isolated. Connect earth signal of the devices with one another.

**Wiring diagrams**


AC/DC 24 V, modulating (VAV)

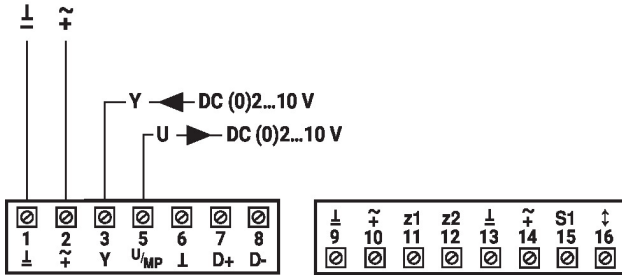

AC/DC 24 V, contactor step control (CAV)

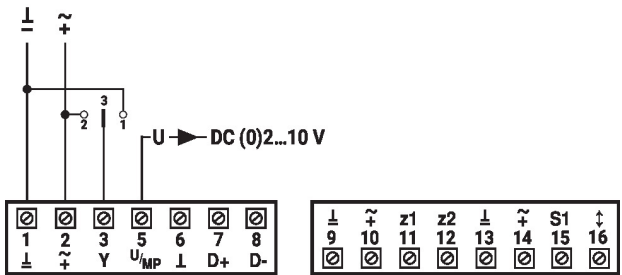

AC/DC 24 V, override control z1/z2

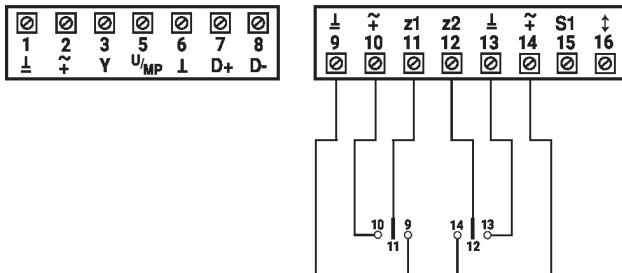

**Priority rule - Analog VAV control**

(a)

1. z1
2. z2
3. a) adaptation  
b) synchronisation
4. Y-modulating: min...max

(see override control z1/z2)

Override command 'damper CLOSE' over reference signal Y

(in Mode 2...10 V):  
 < 0.3 V = damper CLOSE  
 > 0.3...2 V = V'min  
 2...10 V = V'min...V'max

**Priority rule - Analogue CAV step control (b)**

1. z1
2. z2
3. a) adaptation  
b) synchronisation
4. Y-steps: CLOSE-MIN-MAX

(see override control z1/z2)

Contact 2-3 = MAX  
 3 uncoated = MIN  
 Contact 1-3 = CLOSE (mode 2...10 V)

MIN (mode 0...10 V)

**Override control z1**

Contact 11-9 = Motor STOP  
 Contact 11-10 = Damper OPEN

**Override control z2**


Contact 12-13 = Damper CLOSED  
 Contact 12-14 = MAX

11/12 uncoated = priority rule  
 a/b/c/d/e

**Functions**

**Functions with specific parameters (NFC)**

**MP-Bus**

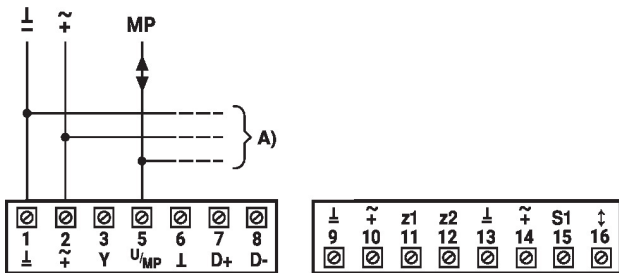


**Priority rule MP-Bus control (c)**

1. z1
2. z2
3. Bus watchdog
4. a) adaptation  
b) synchronisation
5. Y-step: actuator CLOSED / MIN / MAX
6. Bus override
7. Bus setpoint: min...max

A) additional MP-Bus nodes (max. 8)


**MP-Bus Network topology**

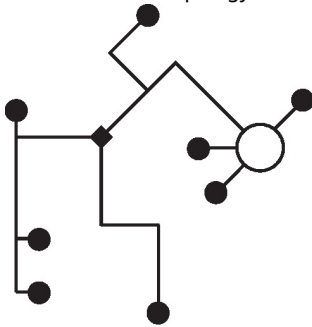

There are no restrictions for the network topology (star, ring, tree or mixed forms are permitted). Supply and communication in one and the same 3-wire cable

- no shielding or twisting necessary
- no terminating resistors required


**BACnet MS/TP / Modbus RTU**

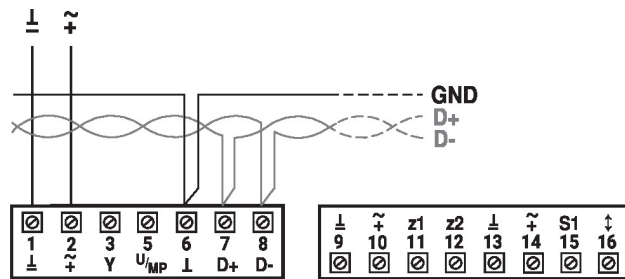

**Priority rule BACnet/Modbus control (d)**

1. z1
2. z2
3. Bus watchdog
4. a) adaptation  
b) synchronisation
5. Bus override
6. Bus setpoint: min...max



**BACnet MS/TP / Modbus RTU with analog setpoint (hybrid mode)**

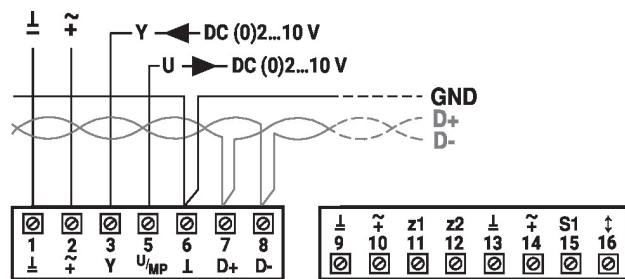


**Priority rule BACnet/Modbus hybrid mode (e)**

1. z1
2. z2
3. Bus watchdog
4. a) adaptation  
b) synchronisation
5. Bus override
6. Y-step: actuator CLOSE / MIN / MAX
7. Bus setpoint: min...max

Connection passive sensor (bus operation)


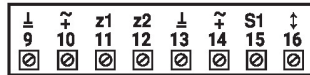



1)	2)
200 Ω...2 kΩ	0.5 Ω
2 kΩ...10 kΩ	2.7 Ω
10 kΩ...55 kΩ	14.7 Ω

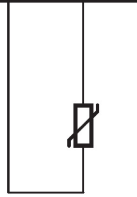




- 1) Resistance range
  - 2) Resolution
- Compensation of the measured value is recommended  
 Suitable for Ni1000 and Pt1000  
 Corresponding Belimo sensors 01DT-..

Connection of active sensor (bus operation)

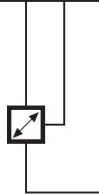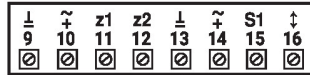

- Possible input voltage range:  
 DC 0...10 V (resolution 5 mV)  
 Example:  
 - Active temperature sensors  
 - setpoint generator  
 - humidity sensor

Connection switching contact (bus operation)

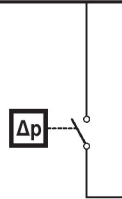

- Requirements switching contact:  
 The switch must be capable of switching a current of 10 mA @ 24 V cleanly.  
 Example:  
 - dP sensor  
 - window contact

**Parameter and tool overview**
**Operating data**

Parameter/Function	Unit/Value	Function/Description/(Area)	Application		Tool			Authorisation
			Room pressure	Room pressure cascade affecting VAV	Assistant app	PC-Tool	ZTH EU	Expert/OEM
<b>Overview</b>								
Position	String	Plant designation (64 Z./ZTH 10 Z.)	X	X	r	r	r	
Series number	xxxxx-xxxxx-xxx-xxx	Series number VRU	X		r	r	r	
Voltage source	24 V/-		X	X	r			
Type	VRU-M1R-BAC		X	X	r	r	r	
Application	Room pressure	Application setting	X		r	r	r	
Room-pressure cascade	OFF/ON/Quick ON	OFF ON: Function activated Quick ON: Activated with VAV fast running actuators	(X)	X X	r	r	r	
Designation	String	Model designation damper (OEM, 16 Z.)	X	X	r	r	-	
Setpoint	$\Delta p$ : Pa / in WC (ZTH: %)	Show live data	X	X	X	X	X	
Actual value	$\Delta p$ : Pa / in WC (ZTH: %)	Show live data	X	X	X	X	X	
Damper position	0...100%	Show live data	X		X	X	X	
Override control	Auto/min./max./hom OPEN/CLOSE/Motor stop	Temporary override function (Tool override)	X X	(X)	X	X		
Actuator	Adaption, synchronisation	Trigger adaption, synchronisation	X		X	X		E
Transmit setting data		System documentation	X	X	X	X		
Save setting data		Save setting in file	X	X		X		
Trend display	Setpoint, actual value, damper position	Commissioning, validation, service	X		X	X		
Trend display	Setpoint, actual value	Commissioning, validation, service		X	X	X		
Transmit trend data		Commissioning, validation, service	X	X		X		
<b>Diagnosis – Evaluation</b>								
<b>Status</b>								
Actuator	OK/not connected/Gear disengaged/Actuator blocked/Setting range extended		X					
Sensor	OK/ $\Delta p$ sensor incorrectly connected/Measuring value outside measuring range/ $\Delta p$ sensor error		X	X				
Room pressure	OK/Setpoint not reached		X	X				
Bus	OK/Bus watchdog triggered		X	X				
<b>Diagnosis – Installation</b>								
<b>Unit/Value</b>								
Voltage source	24 V/de-energised		X	X	X			
Operating time	h	Device connected to supply	X	X	X	X		
Active time	h	Device in motion	X		X	X		
Software Version		VRU - Firmware Version	X	X	X	X		

**Availability:** VAV-Universal components incl. replacement devices are only available from manufacturers of VAV units (OEM).

**Authorisations:** [E – Expert Mode] – Functionally relevant settings are only accessible via the Expert Mode of the Belimo Assistant App.

**Legend**

- X Application supports function/Parameter
- r Tool: Read
- w Tool: Write
- Tool: Does not support parameter
- E Only visible in Expert Mode



## Configuration

Parameter/Function	Unit/Value	Function/Description/(Area)	Application		Tool			Authorisation
			Room pressure	Room pressure cascade affecting VAV	Assistant app	PC-Tool	ZTH EU	Expert/OEM
<b>VAV unit/Duct pressure control damper – manufacturer parameters (OEM values – not variable)</b>								
Application	Room pressure	Application setting	X	X	r	r	r	O
Designation	Text string	Model designation damper (16 Z.)	X	X	r	r	–	O
P'nom	Pa / in WC	Nominal value $\Delta p$ RP [5...75 Pa / .02... .3 in WC]	X	X	r	r	r	O
SN actuator	xxxxx-xxxxx-xxx-xxx	Actuator serial number	X		r	–	–	
Direction of rotation	ccw/cw	Actuator direction of rotation setting	X		r/w	r/w	–	E
Range of rotation	Adapted/programmed	Actuator adapted/programmed 30...95°	X		r/w	r/w	–	E
Power on behaviour	No action/Synch. / Adaption	Actuator power-on behaviour	X		r/w	r/w	–	E
NFC interface	ON/OFF	NFC communication for app access	X	X		r	–	O
<b>Configuration – Project specific settings</b>								
Position	Text string	Plant designation (64 Z./ZTH 16 Z.)	X	X	r/w	r/w	r	
max.	Pa / in WC (ZTH: %)	$\Delta p$ step max. >P'min...100% P'nom	X	X	r/w	r/w	r/w	
min.	Pa / in WC (ZTH: %)	$\Delta p$ step min. >0...100% P'nom	X	X	r/w	r/w	r/w	
Room-pressure mode	Overpressure/Negative pressure	Room operating mode aseptic (+)/ septic (-)	X	X	r/w	r/w	–	E
Application area	Extract air/Supply air	Mounting location for – Control butterfly valve or – Room pressure cascade: VAV unit with Cascade signal (secondary controller)	X	X	r/w	r/w	–	E
Room-pressure cascade	OFF/ON/Quick ON	in connection with the room-pressure cascade ON: Function activated Quick ON: Activated with VAV fast runner	(X)	X X	r/w	r/w	–	E
Setpoint	Analogue/Bus	Analogue and hybrid mode/Bus	X	X	r/w	r/w	–	E
Reference signal Y	2...10 V/0...10 V/adjustable	Control setting	X	X	r/w	r/w	–	E
Feedback type	$\Delta p$ /Position	$\Delta p$ /Damper position	X		r/w	r/w	–	E
Feedback U	2...10 V/0...10 V/adjustable	Setting U signal	X		r/w	r/w	–	E

**Availability:** VAV-Universal components incl. replacement devices are only available from manufacturers of VAV units (OEM).

**Authorisations:** [E – Expert Mode] – Functionally relevant settings are only accessible via the Expert Mode of the Belimo Assistant App.

### Legend

- X Application supports function/Parameter
- r Tool: Read
- w Tool: Write
- Tool: Does not support parameter
- E Only visible in Expert Mode

## Bus parameter

Parameter/Function	Unit/Value	Function/Description/(Area)	Application		Tool			Authorisation
			Room pressure	Room pressure cascade affecting VAV	Assistant app	PC-Tool	ZTH EU	Expert/OEM
<b>Configuration – Communication</b>								
Bus protocol	BACnet MS/TP/Modbus/MP <sup>2)</sup>		X	X	r	r	r	E
Bus protocol	BACnet MS/TP		X	-				
MAC address	0...127		X	X	r/w	-	-	E
Baud rate	9600/.../115200		X	X	r/w	-	-	E
Terminating resistor	OFF/ON		X	X	r/w	-	-	E
Instance number	0...4194304		X	X	r/w	-	-	E
Device name	VAV-Universal	(32 Z.)	X	X	r/w	-	-	E
Max. master	0...127		X	X	r/w	-	-	E
Bus protocol	Modbus RTU							
Address	1...247		X	X	r/w	-	-	E
Baud rate	9600/.../115200		X	X	r/w	-	-	E
Terminating resistor	OFF/ON		X	X	r/w	-	-	E
Parity	1-8-N-2/...E-1/...-0-1/...-N-1		X	X	r/w	-	-	E
Bus protocol	MP-Bus <sup>2)</sup>							
MP address	PP/MP1...8 PP	PP (MP OFF)/MP1...8 PP (MP OFF)	X	X	r/w	r/w	-	E
Bus fail position	0%	0...100% (min...max)	X	-	r/w	-	-	E
Compatibility mode	Default/VRP-M <sup>1)</sup>	Default: Belimo MP datapool device VRP-M: VRP-M replacement in existing MP system <sup>1)</sup>	X	-	r/w	r/w	-	E

### Note:

<sup>1)</sup> Refer to instructions: VAV-Universal – MP-Bus existing system:

Replace VRP-M with VRU-...-BAC

<sup>2)</sup> In the room pressure cascade application, the room pressure controller can not be integrated in the MP-Bus system. MP address setting: PP!

### Availability:

VAV-Universal components incl. replacement devices are only available from manufacturers of VAV units (OEM).


### Authorisations:

[O – OEM, Manufacturer Mode] – VRU controllers are calibrated and parameterised by the unit manufacturer according to the application and project. These settings can only be changed by the manufacturer.

[E – Expert Mode] – Functionally relevant settings are only accessible via the Expert Mode of the Belimo Assistant App.

### Legend:

X	Application supports function/Parameter
r	Tool: Read
w	Tool: Write
-	Tool: Does not support parameter
O	Access only with OEM authorisation
E	Only visible in Expert Mode

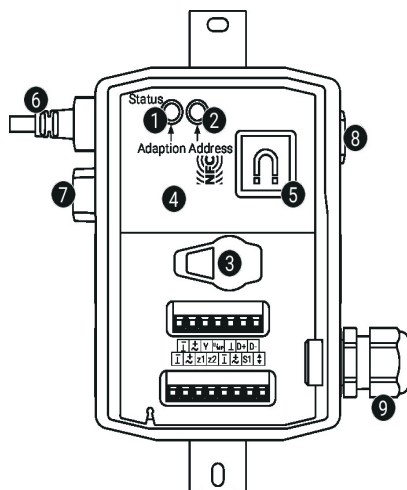**Operating controls and indicators**

**1 Push-button and LED display green**

On: In operation (Power ok)  
 Flashing: Pending status information Belimo Assistant App  
 Press: Triggers angle-of-rotation adaptation, followed by standard mode button:

**2 Push-button and LED display yellow**

Flashing: MP addressing  
 Press button: Confirmation of the addressing

**3 Service plug**

For connecting parametrisation and service tools

**4 NFC interface**

Belimo Assistant App, over NFC interface (Android) or with ZIP-BT-NFC converter for bluetooth connection (iOS and Android Phone)

**5 Mounting plate**

For ZIP-BT-NFC (magnet)

**6 Connection I (M)**

For ..-VST actuator

**7 Blind plug II**
**8 Connection  $\Delta p$  sensor**

6 mm (tube inside diameter 5 mm)

**9 Cable gland M16 (tightening torque 3 Nm)**

**Installation situation**

Mounting VAV-Universal control equipment:

The VAV-Universal set is assembled on the VAV unit in the factory by the VAV unit manufacturer, the actuator is connected to the VRU controller, set and calibrated.

Installation of the VAV unit:

The VAV unit must be installed according to the specifications of the VAV unit manufacturer.

Installation specification  $\Delta p$  sensor:

No restrictions, but it must be avoided that any condensation can run into the sensor and remain there.

Accessibility of control equipment:

Accessibility to the control equipment must be guaranteed at all times.

Cable gland M16x1.5, cable diameter 5...10 mm

Depending on the connection situation, the cable gland can be inserted in one of the M16x1.5 openings.

Removing the actuator:


The connecting cable of the VST damper actuator can be removed from the VRU controller using a screwdriver (size 0...3) as shown in the illustration.

Application without actuator:

The unused connection socket (I)(M) can be sealed with a dummy plug ZG-VRU01, available as an accessory.

Replacing the actuator:

If the VST actuator is replaced during operation, the 24 V supply to the VRU controller must be briefly interrupted. This causes the corresponding actuator driver to be read in.

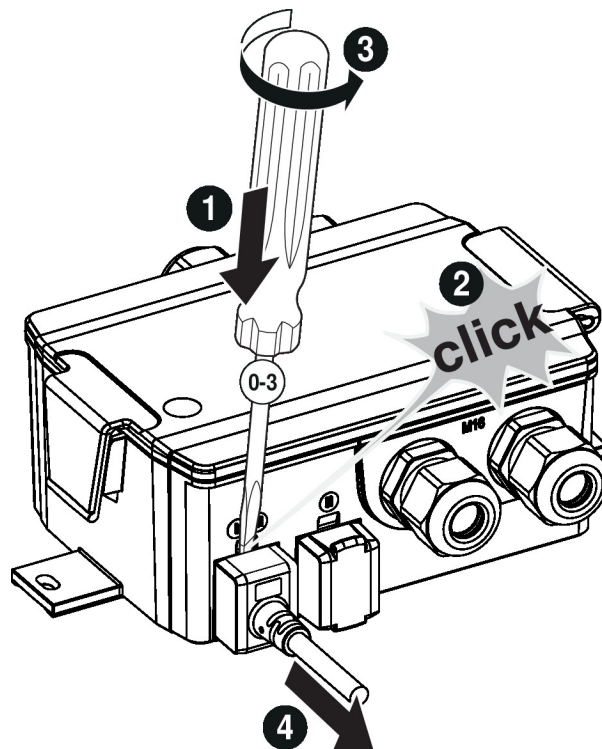


**NFC connection** Belimo devices marked with the NFC logo can be operated with the Belimo Assistant App.

Requirement:


- NFC- or Bluetooth-capable smartphone
- Belimo Assistant App (Google Play & Apple AppStore)

Align NFC-capable smartphone on the device so that both NFC antennas are superposed.

Connect Bluetooth-enabled smartphone via the Bluetooth-to-NFC Converter ZIP-BT-NFC to the device. Technical data and operation instructions are shown in the ZIP-BT-NFC data sheet.

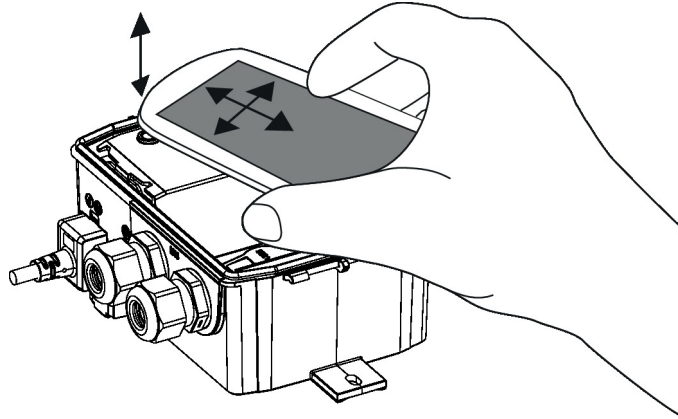


**Converter ZIP-BT-NFC**

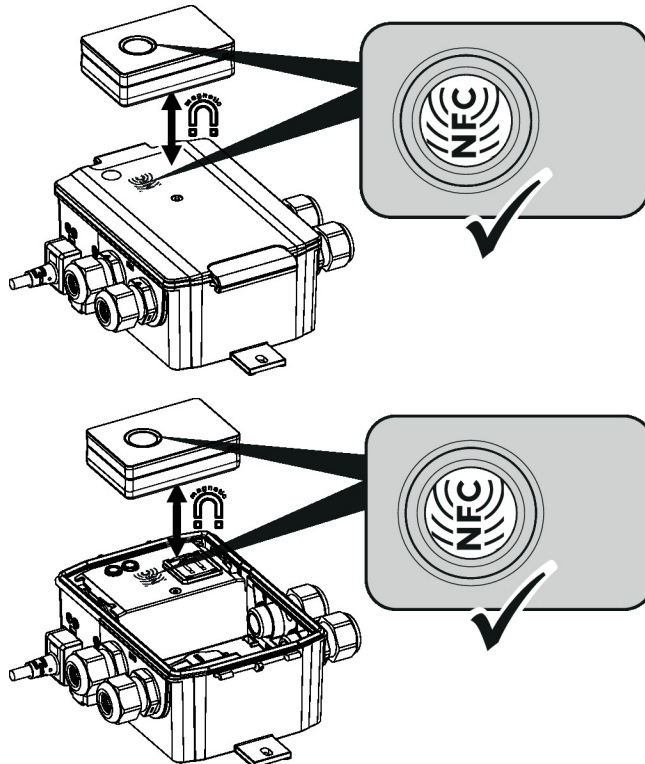


**Tools connection** The device can be configured by ZTH EU via the service socket or by the Belimo Assistant App via NFC.

blue = X  
white = Com  
green = MP

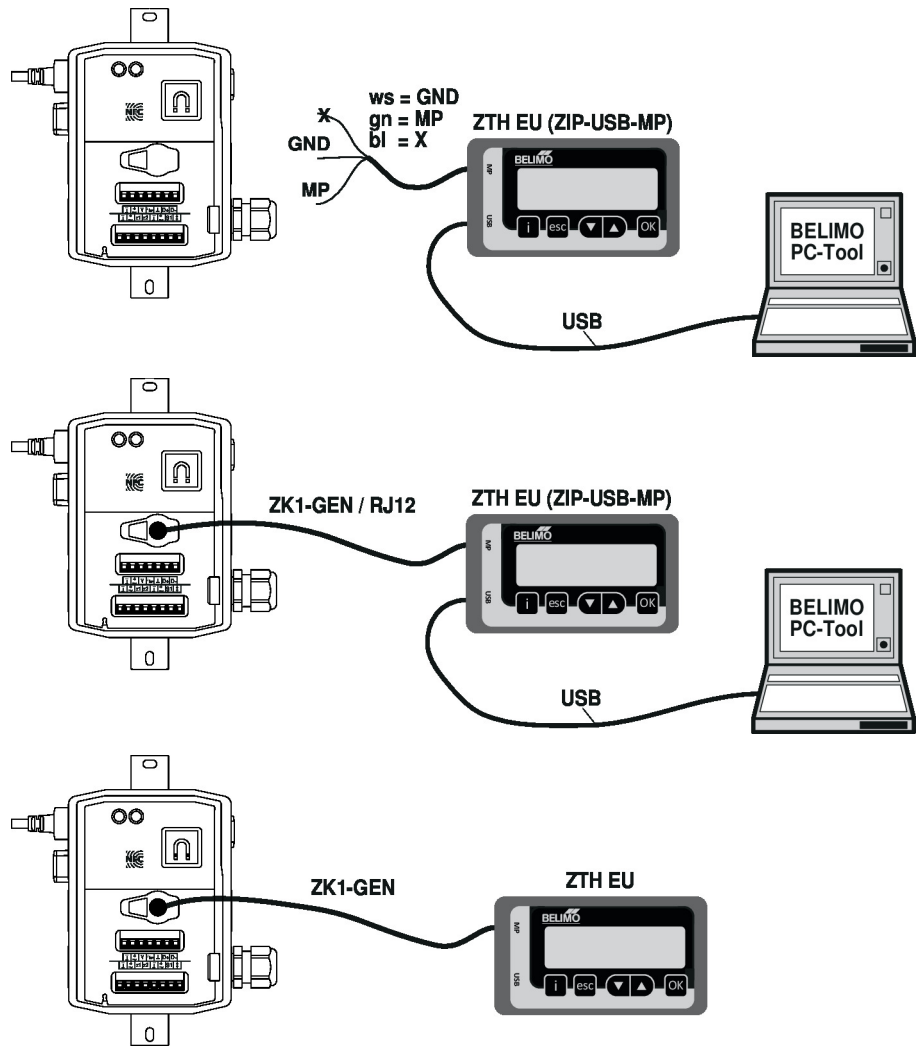

**Dimensions**

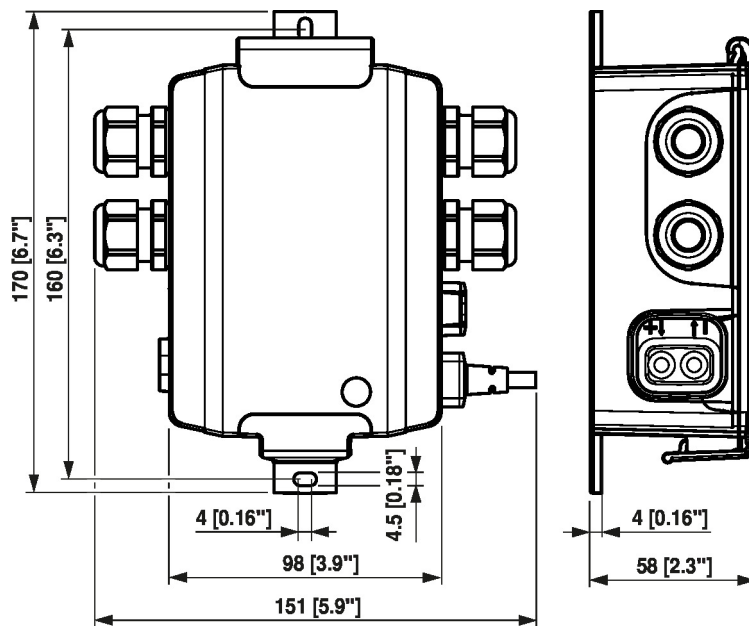

## Further documentation

- Volumetric flow and pressure control from Belimo, product range overview
- Data sheets for VST-actuators
- VAV-Universal application description
- Tool connections
- Modbus Interface description
- Description Data-Pool Values
- BACnet Interface description
- Introduction to MP-Bus Technology
- Overview MP Cooperation Partners