













NOTICE

- This product is not intended for life or safety applications
- Do not install this product in hazardous or classified locations.
- Read and understand the instructions before installing this product. Turn off all power supplying equipment before working on it. The installer is responsible for conformance to all applicable codes.

If this product is used in a manner not specified by the manufacturer, the protection provided by the product may be impaired. No responsibility is assumed by the manufacturer for any consequences arising out of the use of this material.

CWE2 Series

Economy Wall Mounted Air Quality Sensors

Product Overview

The CWE2 Series of air quality sensors for living space are for use with BAS controllers designed to accept 4 to 20mA, 0 to 5 Vdc or 0 to 10 Vdc outputs. These sensors measure CO2 levels using a dual-beam, non-dispersive infrared (NDIR) technology.

The CWE2 Series Economy sensor has an accuracy of ± 30 ppm $\pm 3\%$ of measured value, features 2-wire 4 to 20mA and 3-wire voltage outputs, and is available with optional temperature output.

Product Identification

User Interface

CWE2

Blank = None

C = 1000 PT RTD

D = 10KT2 thermistor

H = 10KT3 thermistor

K = 10K curve G/11K shunt

M = 20K NTC thermistor

N = 1.8KTAC thermistor

Specifications

OPERATING ENVIRONMENT						
Input Power	Class 2; 20 to 30 Vdc, 24 Vac, 50 to 60 Hz					
Max. Current	20 mA					
Analog Output	Selectable 4 to 20 mA, 0 to 5 V, 0 to 10 V					
Analog Voltage Output Mode	$5k\Omega$ minimum load resistance					
Analog Current (mA) Output Mode	500Ω maximum load resistance					
Operating Temp. Range	0 to 50 °C (32 to 122 °F)					
Operating Humidity Range	ge 0 to 95% RH non-condensing					
Housing Material	High-impact ABS plastic					
Terminal Block Torque	0.5 to 0.6 N-m (0.37 to 0.44 in-lbf)					
IP Rating	IP 30					
Mounting Location	For indoor use only. Not suitable for wet locations.					
Surface Mount	The device can be surface mounted on Single Gang J-Box, British Standard and CE60 wall boxes					
CC	CO ₂ TRANSMITTER					
Sensor Type	Dual-beam, non-dispersive infrared (NDIR), diffusion sampling					
Output Range	0 to 2000 ppm					
Accuracy	±30 ppm ±3% of measured value					
Repeatability	y ±20 ppm ±1% of measured value					
Startup Time	e ≤20 seconds					
Response Time	e ≤ 75 seconds for 90 degree step change					





Specifications (cont.)

Max. Load Resistance*	100 Ω at 20 Vdc				
	250 Ω at 24 Vdc				
	500 Ω at 30 Vdc				
WIRING TERMINALS					
Terminal Blocks	Terminal Blocks Screw terminals, 18-24 AWG				
Screw Terminal Torque	0.2 N-m (2.0 in-lbF) max.				
WARRANTY					
Limited Warranty	3 years				
COMPLIANCE INFORMATION					
Agency Approvals	UL 916, European conformance CE:				
	EN61000-6-2				
	EN61000-6-3				
	EN61000 Series - industrial immunity				
	EN 61326-1				
	FCC Part 15 Class B, REACH, RoHS, RCM (Australia), ICES-003 (Canada)				

^{*} Applicable for CWE2 4-20 mA current mode only. If load parameters are not met, product will reset.

Dimensions

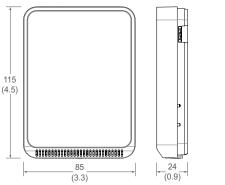

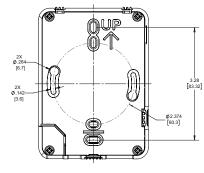

Functions

Installation

The CWE2 Series sensor measures CO2 and temperature (if equipped) in a room and provides analog outputs to a controller.

1. Remove the cover from the base at the bottom of the device.



2. Position the sensor base vertically on the wall 1.35 m (4.5 ft.) above the floor with the "UP" arrow facing upward. Locate away from windows, vents and other sources of draft. If possible, do not mount on an external wall, as this may cause inaccurate temperature readings.







Installation (cont.)

3. Pull 18 or 22 AWG cable(s) through the hole in the backplate.




4. Mount the backplate onto the wall using the screws provided.




Connect the wires to the screw terminals. Do not over-tighten the screws.



CWE2 voltage output wiring diagram:

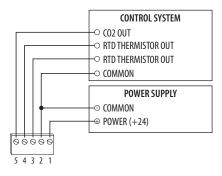


CWE2 current output wiring diagram:

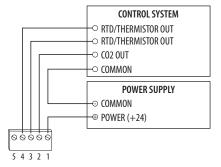



Installation (cont.)

Set the DIP switches.

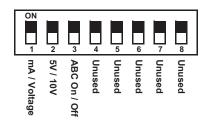

Switch	Function	Description			
1	Output mode	ON - 4-20mA output mode enabled OFF - Voltage output mode enabled			
2	Voltage output range*	ON - 0-5V output range enabled OFF 0-10V output range enabled			
3	Automatic Baseline Calibration (ABC) for CO ₂	ON - ABC enabled OFF - ABC disabled			
4	Unused	Unused			
5	Unused	Unused			
6	Unused	Unused			
7	Unused	Unused			
8	Unused	Unused			

^{*}Only used with voltage output mode enabled. Not applicable to setpoint output. Setpoint is 0-10V fixed.

6. With sensor base fully installed, align top of cover to mounting tabs on top of sensor base. Swing cover downward until it latches at the bottom.



7. Install locking screw to secure cover in closed position.






CO₂ Sensor Calibration

There are two methods for CO₂ calibration available: 400 ppm baseline calibration and automatic baseline calibration (ABC).

400 ppm Baseline Calibration

400 ppm baseline calibration allows the sensor to be set at 400 ppm. Push and hold the calibration button for 3 to 5 seconds. The LED will flash green. Once the button is released, calibration is complete and the LED switches off.

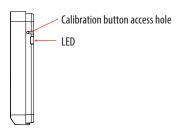

Automatic Baseline Calibration (ABC)

The ABC mode addresses the 400 ppm calibration. It allows turning on or off a background correction/recovery mode that will minimize any calibration error that has been caused by shock during handling and transportation or is caused by a long term shift in measurement. The ABC algorithm constantly keeps track of the sensor's lowest reading over a preconfigured time interval and slowly corrects for any long-term drift detected as compared to the expected fresh air value of 400 ppm. After initial startup, it is expected that the sensor reaches specified accuracy after 7 to 21 days.

China RoHS Compliance Information

Environment-Friendly Use Period (EFUP) Table

部件名称	部件名称 有害物质 - Hazardous Substances						
Part Nam	ne 铅 (Pb) 汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)	
电子件 Electronic	x	0	0	0	0	0	

本表格依据SJ/T11364的规定编制。

- O: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。
- X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。 (企业可在此处,根据实际情况对上表中打 *: 的技术原因进行进一步说明。)

This table is made according to SJ/T 11364.

O: indicates that the concentration of hazardous substance in all of the homogeneous materials for this part is below the limit as stipulated in GB/T 26572.

X: indicates that concentration of hazardous substance in at least one of the homogeneous materials used for this part is above the limit as stipulated in GB/T 26572

Z000057-0B